



# INSTALLATION GUIDE


## FLOC ROLL

### YOU WILL NEED:

Spirit level	Sabre S42 Adhesive
Scissors	Trim guide
Stanley knife	Straight edge
Tape measure	Pencil
Painters tape	Crain 435 Flex Axle Roller
Floor covering	

### IMPORTANT NOTES

1. Floc Roll is usually supplied as 1200mm x 13m rolls with squared edges. When rolls are cut on site, they need to be properly knife trimmed, measured, and aligned/squared due to the stretch properties of wool.  
Due to the nature of wool, some depth variation may occur between panels. Joins will never be completely invisible.
2. We recommend edge profiles on exposed edges. The following profiles are available from your local T&R branch.

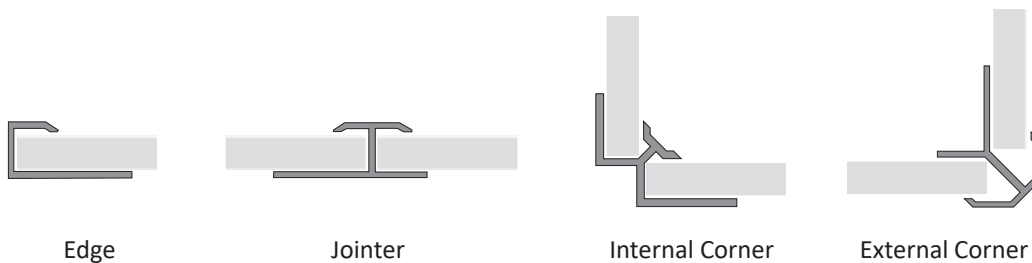

### WALL PREP

- Use painters' tape to mask the skirtings and ceiling.
- Apply painters' tape opposite finished corner to prevent any glue adhesive to finished wall.

### ADHESIVE INSTRUCTION

- All substrates are to be clean and dry, free from moisture and all contaminants.
- Spray 100% coverage on both substrates that require a bond together and wait sufficient time for adhesive to flash off before laminating together (refer to product TDS and instructions).
- Install Floc Roll carefully, applying direct pressure with a Crain #333 floor/wall roller or similar.
- Strictly follow adhesive instructions.



## INSTALLATION GUIDE FLOC ROLL

### STEP ONE (two people required)

Draw a vertical line in pencil using a spirit level to ensure the first Floc panel is perfectly straight. If going from a corner, measure the width of the panel minus 30mm and check against the spirit level. Put a mark close to the ceiling at this point. This will be the point to determine the edge of the panel. Using a spirit level, draw a vertical line.

### STEP TWO

Trim the Floc Roll to desired length of panel if applicable. Allow for a minimum 20mm or adequate overlap over skirting, scotia and frames- this is to be trimmed later.

### STEP THREE

Spray both surfaces with the adhesive, being careful not to over spray the painter's tape. Ensure adequate adhesive transfer for a strong bond. Wait sufficient time for adhesive to flash off before laminating together. Refer to adhesive instructions.

### STEP FOUR

The left-hand side of the first Floc panel should line up with your straight pencil mark, allowing a gap between your first panel and the corner. Fit this panel later.

Once positioned correctly, smooth out with your hand as you work your way down the Floc panel. Smooth out all bubbles and ensure the edges are firmly in contact with the wall. Floc is forgiving and can be manipulated into place. Using a sharp Stanley knife, trim opposite edge using a spirit level to accurately cut a straight line.

*Note: When joining Floc Roll together with a butt-joint it is recommended the panel is fitted firmly at the join first, use a Crain 435 Flex Axle Roller to even out join if required.*

### STEP FIVE

Continue the wall coverings onto the ceiling and skirting, then trim any excess at top and bottom with a straight edge and Stanley knife. At corners allow a 30mm overlap (over painter's tape). Using a straight edge, run your box cutter down the corner to create a perfect straight edge.

Slightly pull Floc away from edges to remove painters' tape then push the Floc panel back to substrate. This will prevent wool and adhesive particles sticking to finished surfaces.

NB: Always work away from the main source of light and finish in the least conspicuous corner.

